 


Installing Your New Digital Adapter

MPW
DIGITALtv


Steps to Install

- Connect the coaxial cable from your wall outlet to the connector on the back of the digital adapter labeled **Cable In**.
- Connect the digital adapter labeled **To TV**, to the back of the TV using the coaxial cable provided.
- Make sure all connections are hand-snug tight.

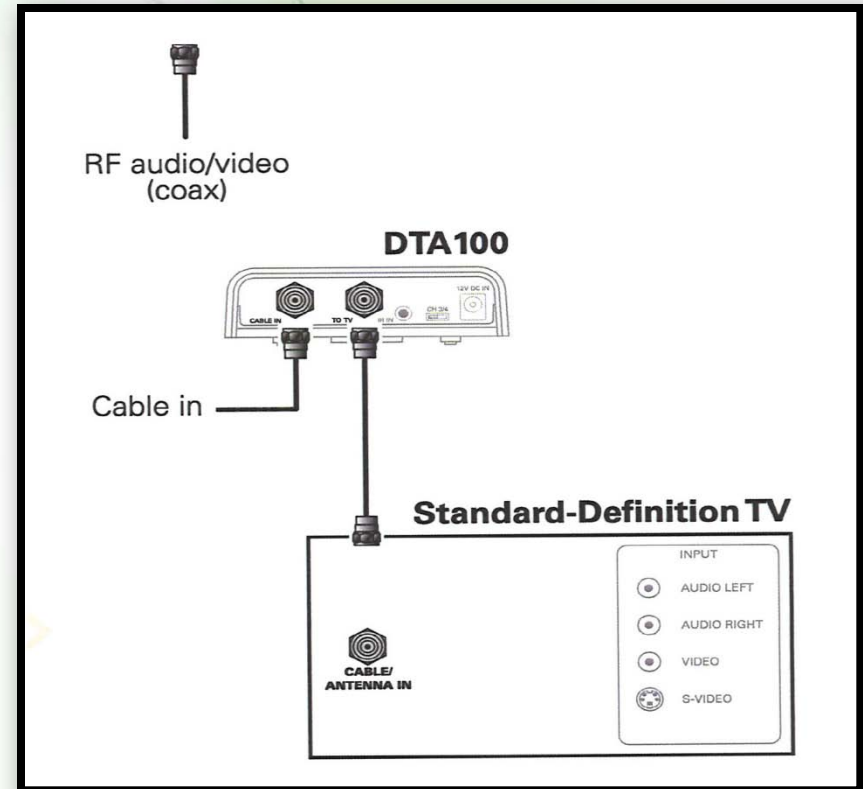



Steps to Install

- Plug the power cord into the back of the digital adapter marked **+12V DC In**.
- Plug the other end into a non-switched wall electrical outlet. The digital adapter will turn on automatically.
- If you wish to keep the digital adapter out of view, affix the velcro strips to the back of the two mounting squares on the bottom.

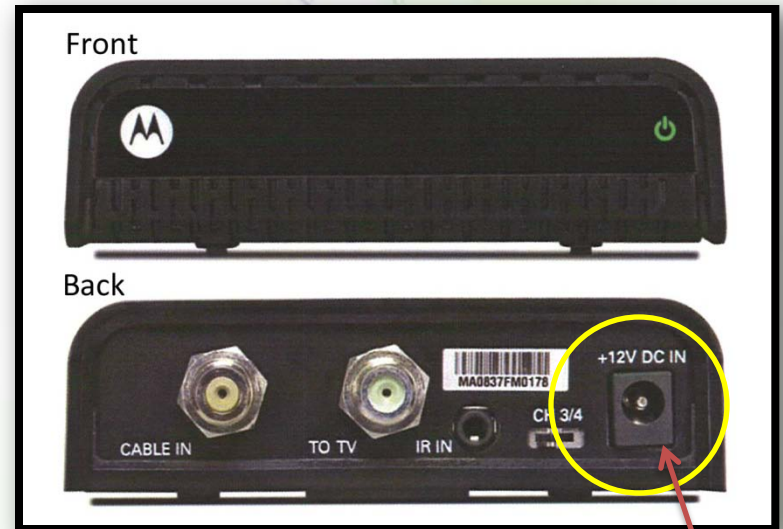


Steps to Install

- You can attach the digital adapter to the back of the TV or a cabinet or anywhere that you can still reach your TV with the cable provided.
- When you place your digital adapter out of view, you must use your remote extender (IR).
- Connect the IR into the back of the adapter where it is marked **IR IN**.

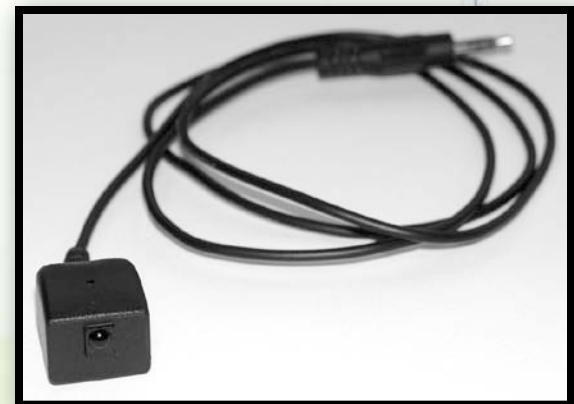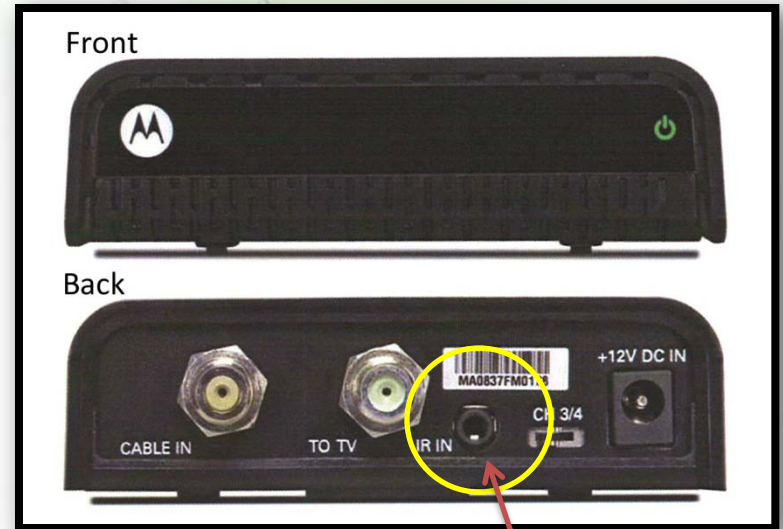


Steps to Install

- Position the opposite end of the remote extender in view of the remote control.
- Tune your TV to channel 3. On the back of the digital adapter, ensure you have selected CH 3.

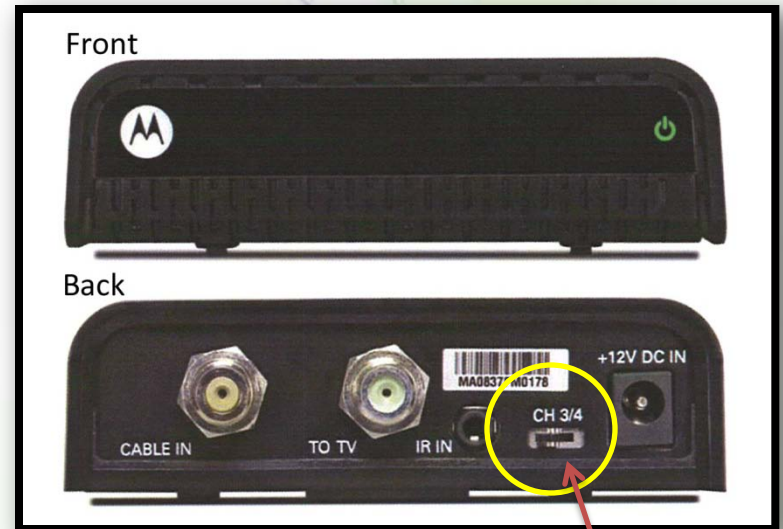

Steps to Install

- Install all of your new digital equipment following these or the instructions enclosed with your box(es).
- Wait approximately 10 minutes to allow the box(es) to load service information.
- Call MPW Digital TV at 263-2631 to activate your services.
- Enjoy your new service!

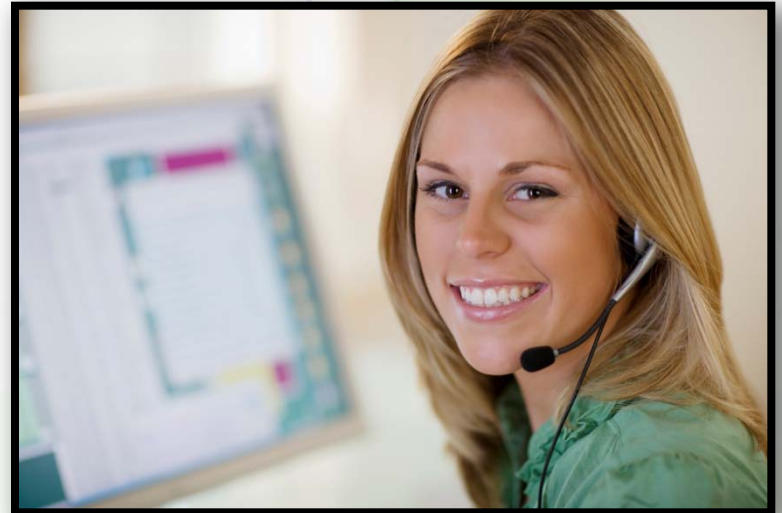

Programming Your Remote Control

- Refer to the instructions included with your Digital Adapter and Remote Control.
- Turn on your TV.
- Press [OK], then [MUTE] together on the remote until the LED illuminates.



Programming Your Remote Control

- Locate the 3-digit code for your brand of TV in the TV Setup Code list on instruction brochure.
- Enter the code on the keypad of the remote control. Entry of the correct code will cause your TV to turn off.
 - If multiple codes are listed, you may have to enter several until your TV turns off.
- When you enter a 3-digit code that turns off your TV, press [MUTE].



Programming Your Remote Control

- If the TV turns back on, press [OK] to lock in the code. The LED will blink and go out.
 - If the TV does not turn back on, try different listed codes for your brand of TV until your TV turns back on. Then press [OK] to lock in the code. The LED will blink and go out.
- To program the volume controls, please refer to the instructions included with your equipment.



For More Information

- Read the instruction manuals for both the Digital Adapter and Remote Control included with your equipment.
- Visit www.mpw.org for a downloadable version of this presentation.
- Call MPW Digital TV at 263-2631.

